

# Converting Mellanox EMC switch to SX60xx

Version v1.12

Originally prepared by: dodgy route

Please note, this is **not a guide and should not be used by anyone**, it is purely for my personal research purposes only.

There is no warranty, support or anything implied, as you are not doing anything more than reading this document.

If you use this document for something evil, hired goons will be dispatched at short notice to rectify the situation.

## About this document

This document is a compilation of my own testing, learning from my mistakes and reading information from the EMC switch thread on STH which I will try to credit as much as possible. Thanks to mpogr for the initial guide on converting the switch, which this document is a complete replacement for, the process is nothing alike. He sparked the idea, leading to many people performing updates and progressing the document.

The reason this is not an update to mpogr's document is this process is entirely different to convert the switch to a plain Mellanox version. This document is based on my experience with the SX6012 but will ultimately work for SX6018 and SX6036.

This allows one to then perform OS updates from the CLI or GUI, perform factory resets as well as run multiple images without worry of things breaking or not working ever.

This information is available online in bits and pieces, all over the place, I merely compiled it into this document for myself.

## Document revision history

2022.01.11 - v1.12 - dodgy route

- As reported by arnbju in heading get current FRU, show devs does not work at this stage, I added to doco post conversion and I could not remember if it worked at the time, so now that it's confirmed its not working its removed

2022.01.11 - v1.11 - dodgy route

- Necrotyr has successfully confirmed the EMC to SX6018 FRU changeover works and followed guide to convert fine
- Necrotyr has confirmed the document works on a previously converted SX6018 in fact, using mpogr's notes
- Reverted v1.10 changed back to MSX6018F-2SRS again post Necrotyr completing testing as the chassis is exactly that

2022.01.10 - v1.10 - dodgy route

- Fixed mistake for SX6018, had MSX6018F-2SRS for FRU, changed to MSX6018F-2SFS, air flowing out connector side

2022.01.10 - v1.09 - dodgy route

- Adding instructions for converting SX6018 with the help of Necrotyr who is hopefully going to test

- Added copies of the FRU change script I modified, based entirely on SGS original scripts to cover SX6018 all versions, once testing done will leave only the EMC one
- Modified Change FRU process to be more friendly for SX6012, SX6018 and SX6036 series
- Added information to Get current FRU heading, was present in appendix but included for sake of clarity
- Clarified PSID numbers for SX6012 and SX6018, do not have information yet for SX6036

#### 2022.01.06 - v1.08 - dodgy route

- Created process for bootloader password disable on images version  $\geq 3.6.5000$
- Clarified update process, image delete is only done once both partitions are updated
- Clarified update process, image fetch is only done once both partitions are updated
- Updated about this document description slightly

#### 2022.01.06 - v1.07 - dodgy route

- Updated generate licences with info from andvalb for generating one license key with multiple licences activated
- Updated genlicense topic with new single license key information for enabling ethernet
- Updated loading licenses topic with new single license key information for enabling ethernet

#### 2022.01.05 - v1.06 - dodgy route

- Updated manufacture switches to install bootloader that flashes Mellanox U-BOOT that enables the boot menu
- Removed v1.05 section to add MLNX-OS boot menu manually using official process, now done during manufacture
- Added Appendix 5 – Mellanox U-BOOT environment variables
- Clarified the bootloader password will need to be removed on every image update if need bootloader/U-BOOT access
- Clarified the bootloader password removal needs to be done from `_shell`

#### 2022.01.04 - v1.05 - dodgy route

- As per previous update, added section how to add MLNX-OS boot menu, the process fixes booting to partition 2
- Added section how to remove bootloader password so can use boot menu
- Added picture to last reboot step showing the CRC change as well as MLNX-OS boot menu availability
- Finished updating the switch software image update process and pictures as that is now working correctly

#### 2022.01.04 - v1.04 - dodgy route

- Added run `boot_mlxlinux` to switch preparation
- Changed information about fan speed dropping on post conversion reboot to include actual percentages
- Started adding information on upgrade process to bring converted switch up to latest version
- Not a problem but definitely a nuisance, the update process is not booting to partition 2 automatically, but the upgrade process works great, guessing remnant of EMC U-BOOT settings, trying to resolve but help is appreciated. Believe to be related is the switch does not present a menu to boot from which partition, so believe U-BOOT related

#### 2022.01.04 - v1.03 - dodgy route

- Send the updated FRU to the switch heading, updated text to match reading FRU for bus number
- Send the updated FRU to the switch heading, image MIA - now re-attached

#### 2022.01.04 - v1.02 - dodgy route

- Clarify reboots are just commands run through the console
- Crop picture in firmware upload
- Change document revision history format

2022.01.04 - v1.01 - dodgy route

- Fix initial version date
- Fix some text under download mfa\_extract.py heading

2022.01.03 - v1.00 - dodgy route

- Initial version

## Pre requisites and preparation

List of all required hardware and software for this learning exercise. Software is listed and configuration provided if needed.

- Windows 10 machine, also tested via Linux, but process is same as this document, using Linux applications of course
- Console cable to connect between switch and machine
- Network cable to connect the Mellanox management port to an existing switch to access Win10 machine's network
- Putty
- Tftpd64
- 7zip
- Mellanox Firmware Tools (MFT)
- Python 3
- SwitchX software packages detailed in next section

## Windows 10 machine preparation

ALL of these steps re required to be completed for conversion process as well as upgrading to latest MLNX-OS afterwards

### Install 7zip for Windows

Link: <https://www.7-zip.org/download.html>

### Download and configure Uniform web server

This is used to serve the images and various files needed for the conversion


Link: <https://www.uniformserver.com/>

My link/version at the time of writing is: [https://sourceforge.net/projects/miniserver/files/Uniform%20Server%20ZeroXIV/14\\_0\\_3\\_ZeroXIV/](https://sourceforge.net/projects/miniserver/files/Uniform%20Server%20ZeroXIV/14_0_3_ZeroXIV/)

This is a self-extracting 7zip archive, it is not an installer. Does not touch registry/etc

On my desktop I have a Mellanox folder

- Run the exe and select the Mellanox folder, should now have a UniServerZ folder in Mellanox folder
- For the Uniform Server I have created web\_share folder under Mellanox folder to serve files from

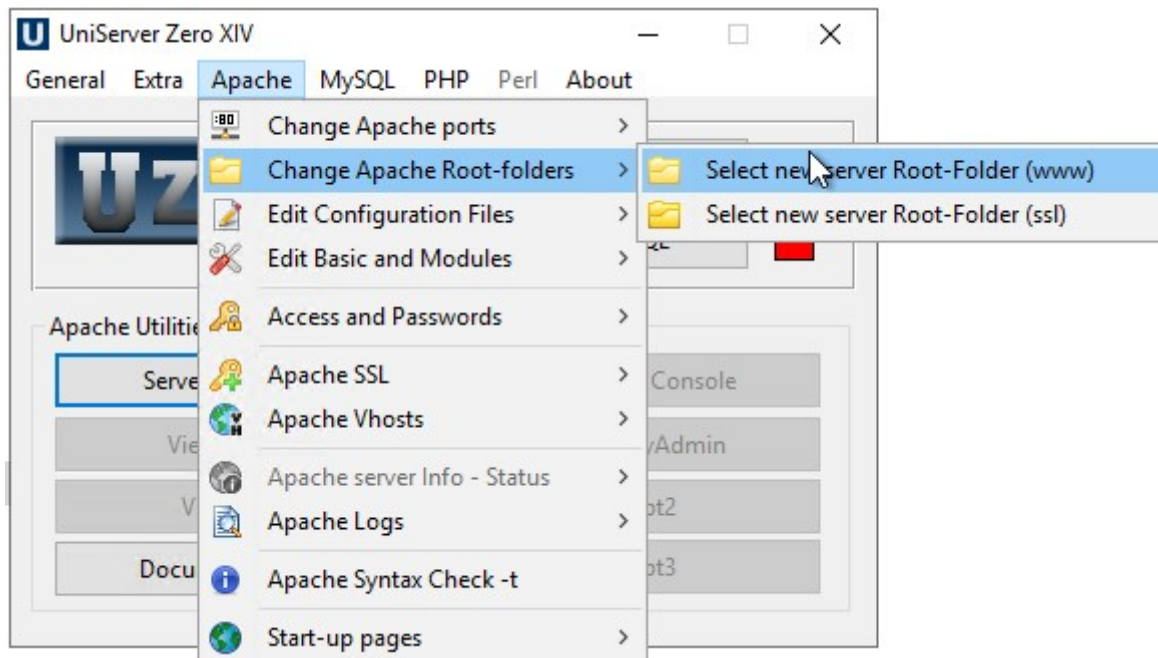

- Click Start Apache from the UniServer dialog

**NOTE:** As per readme, x86 version of Visual C++ Redistributable for Visual Studio 2019 is required. May already be installed

Link: <https://support.microsoft.com/en-us/help/2977003/the-latest-supported-visual-c-downloads>

### Download and configure Tftpd64

Tftpd64 is used as a quick tftp and DHCP server. If there is DHCP in the network, no need to run the DHCP server

Link: <https://pjo2.github.io/tftpd64/>


My link/version at the time of writing is:

<https://bitbucket.org/phjounin/tftpd64/downloads/tftpd64.464.zip>

On my desktop I have a Mellanox folder

- Extract the zip to the Mellanox folder, should now have a tftpd64 folder in Mellanox folder
- For the Tftpd64 server I have created tftpd\_share folder under Mellanox folder to serve files from
- In the tftpd\_share folder I have a folder called "mlnx460ex" which must be lowercase as per this document

In Tftpd64 set up the base directory as tftpd\_share

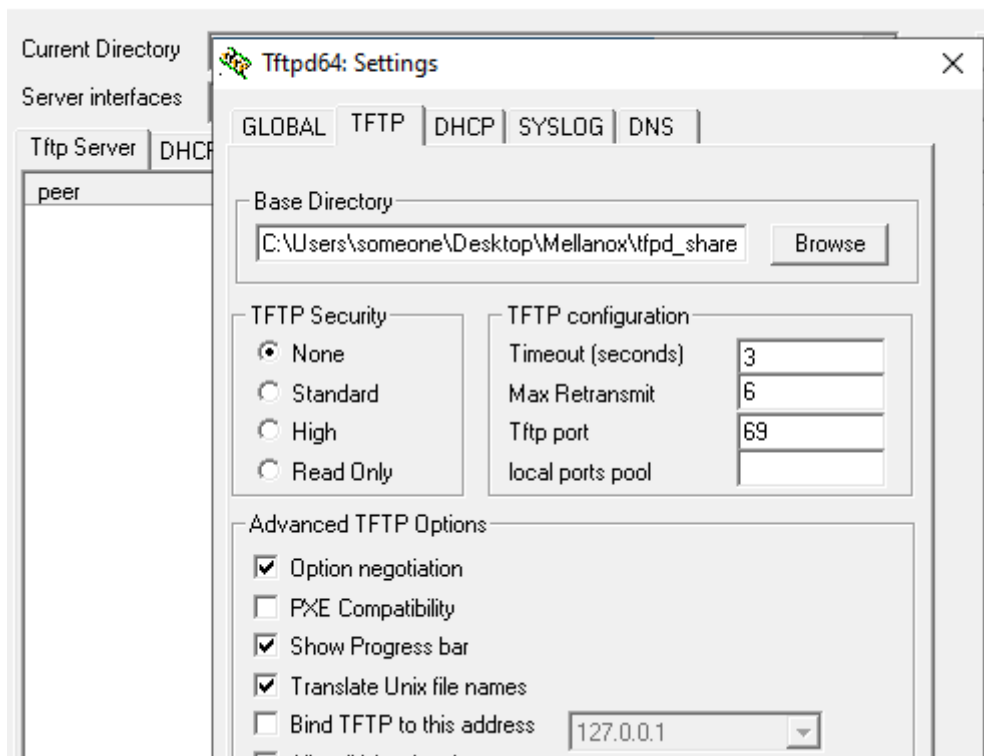

## Set up Firewall to accept inbound connections

This is to set up Windows Defender Firewall with Advanced Security to allow connections to the Win10 machine


### Add Uniform web server to firewall


Add a new inbound rule to allow tcp port 80 to httpd\_z.exe program on all profiles

**NOTE:** Overwrite what is in the program path. The firewall does not understand the variable name, Microsoft problems....

Original path is put in as %USERPROFILE%\Desktop\Mellanoxtftpd\_share\httpd\_z.exe

Change path to C:\Users\your\_user\_profile\_name\Desktop\Mellanoxtftpd\_share\httpd\_z.exe

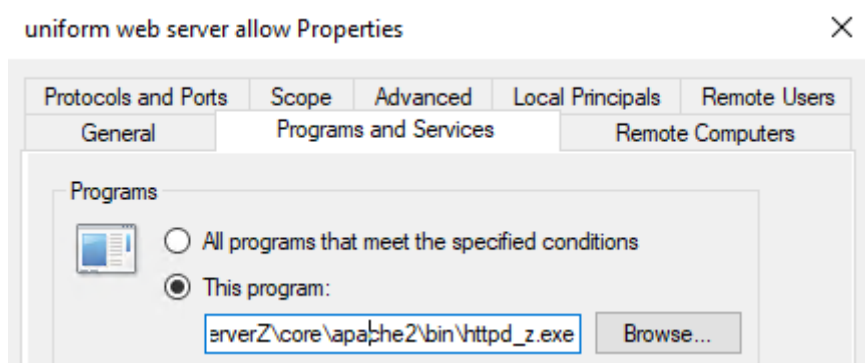

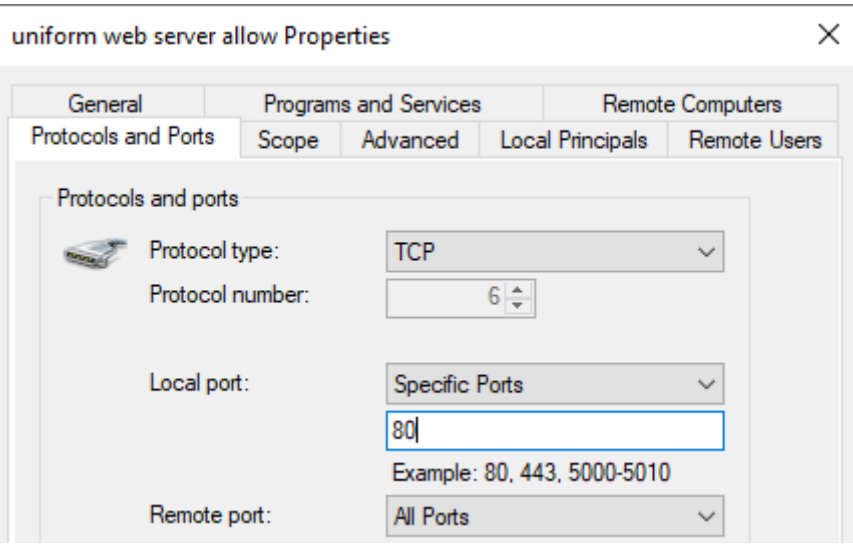



### Add Tftpd64 to firewall

Add a new inbound rule to allow udp port 67 and 69 to tftpd64.exe program on all profiles

**NOTE:** Overwrite what is in the program path. The firewall does not understand the variable name, Microsoft problems....

Original path is put in as %USERPROFILE%\Desktop\Mellanox\tftpd64\tftpd64.exe

Change path to C:\Users\ **your\_user\_profile\_name**\Desktop\Mellanox\tftpd64\tftpd64.exe

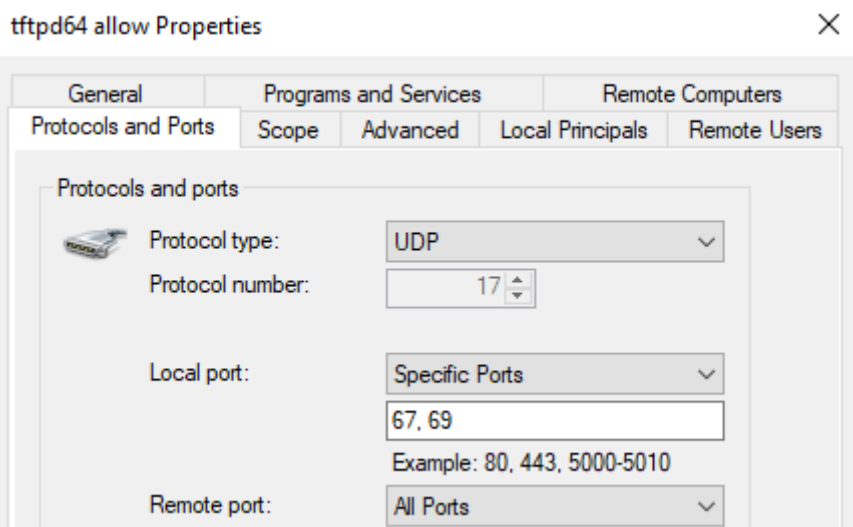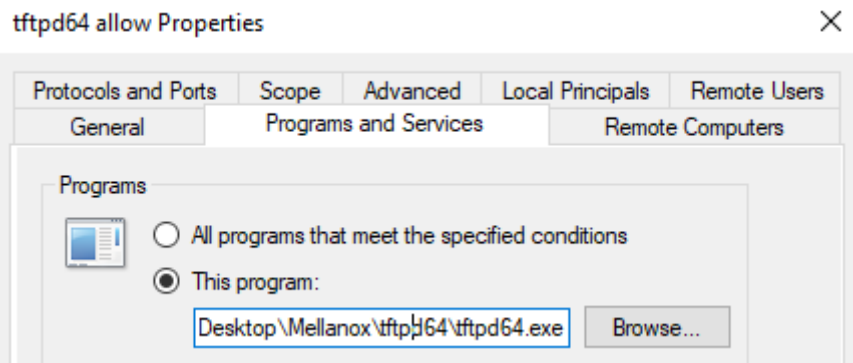

### Download manufacturing environment

Download the 3.2.0100 version software package

Link: [https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX\\_93f9ad4836824db99c8d873d67](https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX_93f9ad4836824db99c8d873d67)

From the downloaded file, extract the below files to the mlnx460ex directory and rename


**NOTE:** Ensure in Windows folder options the “Hide extensions for known file types” is unchecked

fdt-PPC\_M460EX-SX\_3.2.0100.img **rename to** fdt

rootfs-PPC\_M460EX-SX\_3.2.0100.img **rename to** rootfs

vmlinuz-PPC\_M460EX-SX\_3.2.0100.img **rename to** vmlinuz

These files are needed for tftp to load up the manufacturing environment and my mlnx460ex folder looks like this

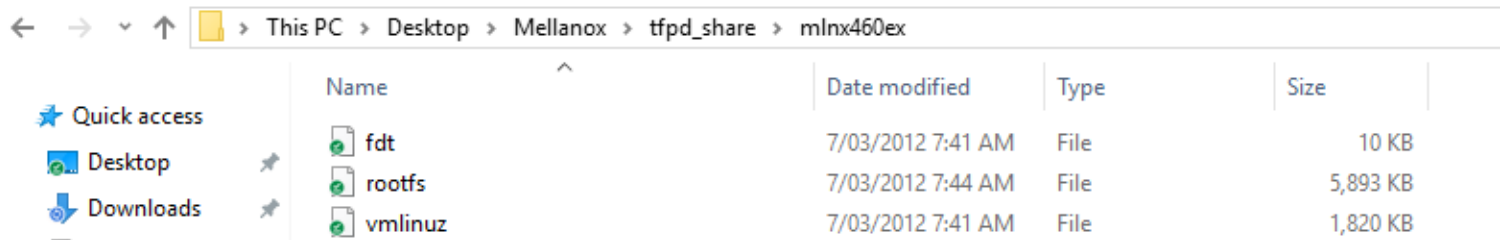

	Name	Date modified	Type	Size
	fdt	7/03/2012 7:41 AM	File	10 KB
	rootfs	7/03/2012 7:44 AM	File	5,893 KB
	vmlinuz	7/03/2012 7:41 AM	File	1,820 KB

### Prepare switch software packages

All of the below switch software packages need to be downloaded

After downloading use 7zip and extract the .img file from each package to the web\_share folder, apart from 3.6.8012

3.4.0012 link: [https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX\\_563eb88aa55a4495b6a30033a1](https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX_563eb88aa55a4495b6a30033a1)

3.4.2008 link: [https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX\\_6c8ee134228f4882ad517a3b4e](https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX_6c8ee134228f4882ad517a3b4e)

3.5.1006 link: [https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX\\_1f7fc6ca8d2942b2b04bb82764](https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX_1f7fc6ca8d2942b2b04bb82764)

3.6.3004 link: [https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX\\_061c24a638b44bd2826c344823](https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX_061c24a638b44bd2826c344823)

3.6.4006 link: [https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX\\_acc6f261080046aab9935cedbc](https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX_acc6f261080046aab9935cedbc)

3.6.5000 link: [https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX\\_df68447dc2f14228a9e5839641](https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX_df68447dc2f14228a9e5839641)

3.6.8010 link: [https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX\\_f1ab10f1084d4bc7951a1ade5c](https://support.hpe.com/hpesc/public/swd/detail?swItemId=MTX_f1ab10f1084d4bc7951a1ade5c)

3.6.8012 link: [https://www.mellanox.com/downloads/Software/image-PPC\\_M460EX-3.6.8012.img](https://www.mellanox.com/downloads/Software/image-PPC_M460EX-3.6.8012.img)


### Install and configure PuTTY

This is used to access the console terminal of the switch


Link: <https://www.chiark.greenend.org.uk/~sgtatham/putty/latest.html>

My link/version at the time of writing is: <https://the.earth.li/~sgtatham/putty/latest/w64/putty-64bit-0.76-installer.msi>

Find the COM port needed to use in PuTTY in the Windows device manager

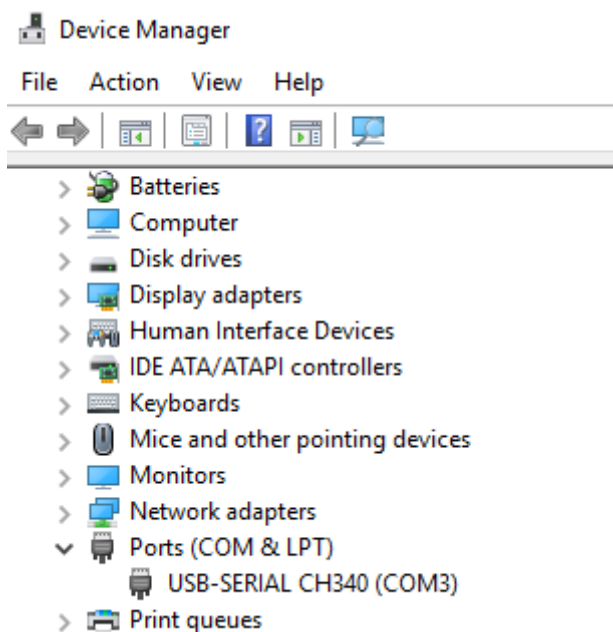

Use this port in PuTTY, change the connection type to Serial and change COM1 to COM3 as per device manager.

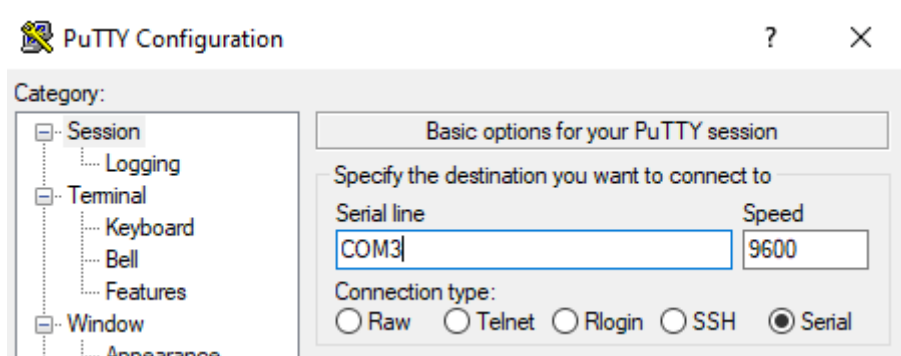

## Install Python3

Link: <https://www.python.org/downloads/windows/>

My link/version at the time of writing is <https://www.python.org/ftp/python/3.10.1/python-3.10.1-amd64.exe>

## Install Mellanox Firmware Tools (MFT)

Link: <https://www.mellanox.com/products/adaptersoftware/firmware-tools>

My link/version at the time of writing is

[https://www.mellanox.com/downloads/MFT/WinMFT\\_x64\\_4\\_18\\_0\\_106.exe](https://www.mellanox.com/downloads/MFT/WinMFT_x64_4_18_0_106.exe)

## Prepare SX60xx firmware

### *Extract firmware update*

Prepare firmware update based on image-PPC\_M460EX-SX\_3.4.0012.img as that is what we will manufacture with

Open image-PPC\_M460EX-SX\_3.4.0012.img with 7zip and get into the base folder structure

From the image extract file fw-SX-rel-9\_3\_1260-FIT.mfa which is in .\opt\tms\bin folder to the web\_share folder



Name	Size	Packed Size	Modified	Mode	User	Group
eetool	38 653	38 912	2014-12-16 09:00	-rwxr-xr-x	root	bin
fcfd	4 111 011	4 111 360	2014-12-16 09:02	-rwxr-xr-x	root	bin
fw-SX-rel-9_3_1260-FIT.mfa	1 089 980	1 090 048	2014-12-16 09:01	-rwxrwxrwx	root	root
fw_updt	3 948 880	3 949 056	2014-12-16 09:02	-rwxr-xr-x	root	bin
genlicense	2 707 021	2 707 456	2014-12-16 09:00	-rwxr-x---	root	bin

[Download mfa\\_extract.py firmware extraction script](#)

This is created by a BeTeP on STH

Link: <https://github.com/BeTeP-STH/mft-scripts>

Direct link to script: [https://raw.githubusercontent.com/BeTeP-STH/mft-scripts/master/mfa\\_extract.py](https://raw.githubusercontent.com/BeTeP-STH/mft-scripts/master/mfa_extract.py)

The scripts are backed up to Appendix 1 - mfa\_extract.py

I store mine in the web\_share folder inside the Mellanox folder as the extracted file is generated there

[Change mfa\\_extract.py script](#)

Edit mfa\_extract.py script, line 16, change from FLINT = "mstflint" to FLINT = "flint.bat" (quotes...)

```

1  #!/usr/bin/python3
2
3  # tested with
4  # mstflint -v
5  # mstflint, mstflint 4.6.0. Git SHA Hash: 375120d
6
7  import sys
8  import os
9  import subprocess
10 import struct
11 import zlib
12 import lzma
13 import re
14 import configparser
15
16 FLINT = "mstflint"
17

```

```

1  #!/usr/bin/python3
2
3  # tested with
4  # mstflint -v
5  # mstflint, mstflint 4.
6
7  import sys
8  import os
9  import subprocess
10 import struct
11 import zlib
12 import lzma
13 import re
14 import configparser
15
16 FLINT = "flint.bat"
17

```

[Get available firmware](#)

In regular user privileges PowerShell, the below commands will print the list of all firmware PSID available

cd .\Desktop\Mellanox\web\_share

py .\mfa\_extract.py .\fw-SX-rel-9\_3\_1260-FIT.mfa l

Windows PowerShell

```

PS C:\Users\ > cd .\Desktop\Mellanox\web_share
PS C:\Users\ \Desktop\Mellanox\web_share> py .\mfa_extract.py .\fw-SX-rel-9_3_1260-FIT.mfa l
1. FJT0DC0100019 CA07156-0221_A0_01 IB-FDR Switch Module x 18 ports for BX900
2. FJT0DC0102019 CA07156-0221_02 IB-FDR Switch Module x 18 ports for BX900
3. HP_0260120020 648311-B21_Bx HP BLc 4X FDR IB Managed Switch
4. HP_0290210017 689638-B21_Ax Mellanox SX1018HP Ethernet Switch
5. HP_0290212017 689638-B21_Bx Mellanox SX1018HP Ethernet Switch

```

63. MT_1240110020	MSX6018F_A1	SwitchX based FDR InfiniBand Switch; 18 QSFP; Managed
64. MT_1240110029	MSX6018T_A1	SwitchX based FDR-10 InfiniBand Switch; 18 QSFP; Managed
65. MT_1240110029	MSX6018T-xxxS_Ax	SwitchX-2 based FDR-10 InfiniBand Switch; 18 QSFP; Managed
66. MT_1240212020	MSX6018F-xxxS_Ax	SwitchX-2 based FDR InfiniBand Switch; 18 QSFP; Managed
67. MT_1250110001	MTX6100_Ax	MetroX 10km long haul FDR10 InfiniBand switch; 6 long haul QSFP+ ports; Managed
68. MT_1260110027	MSX1036B-xxxS_Ax	SwitchX-2 based 36-port QSFP 40GigE 1U Ethernet switch
69. MT_1270110020	MSX6012F_Ax	SwitchX-2 based FDR InfiniBand Switch; 12 QSFP ports; Managed ; Subnet Manager for 648 nodes
70. MT_1270110029	MSX6012T_Ax	SwitchX-2 based FDR10 InfiniBand Switch; 12 QSFP ports; Managed ; Subnet Manager for 648 nodes
71. MT_1270110029	MSX6012F_WT_Ax	SwitchX-2 based FDR IB; 12 QSFP ports; Managed ; Subnet Manager for 648 nodes; P1-2 LR4 enabled
72. MT_1490110004	MSX1400-Bxxx2_Ax	SwitchX-2 based Ethernet Switch; 48-port SFP+ 10GbE; 12 port QSFP 40GbE; x86 CPU
73. MT_1500310020	MSX6700-Fxxx2_Ax	SwitchX-2 based 36-port QSFP FDR 1U Infiniband Switch; x86 CPU
74. MT_1500310024	MSX1700-Bxxx2_Ax	SwitchX-2 based 36-port QSFP 40GbE 1U Ethernet Switch; x86 CPU
75. MT_1530310031	MSX6036G-xxxS_Ax	SwitchX-2 based 36-port QSFP 56GbE Managed InfiniBand to Ethernet gateway system
76. MT_1540110024	MSX1012B_Ax	SwitchX-2 based 12-port QSFP+ 40GbE ; 1U Ethernet switch
77. MT_1550110004	MSX5000-A	SwitchX-2 based 12-port QSFP+ 40GbE ; 1U Ethernet switch

We need the switch PSID, here is a list of PSID matched to switch model

SX6012: MT\_1270110020 (Line 69 in screenshot)

SX6018: MT\_1240212020 (Line 66 in screenshot)

SX6036: Yet to be determined?

### Extract firmware .bin file

After running the list command, change it as per below to extract using the needed PSID determined above for switch type

SX6012: py .\mfa\_extract.py .\fw-SX-rel-9\_3\_1260-FIT.mfa MT\_1270110020

SX6018: py .\mfa\_extract.py .\fw-SX-rel-9\_3\_1260-FIT.mfa MT\_1240212020

SX6036: Yet to be determined?

### Windows PowerShell

```
PS C:\Users\... \Desktop\Mellanox\web_share> py .\mfa_extract.py .\fw-SX-rel-9_3_1260-FIT.mfa MT_1270110020

FS2 failsafe image. Start address: 0x0. Chunk size 0x200000:

NOTE: The addresses below are contiguous logical addresses. Physical addresses on
flash may be different, based on the image start address and chunk size

/0x00000038-0x000013bb (0x001384)/ (BOOT2) - OK
/0x000013bc-0x00002913 (0x001558)/ (BOOT2) - OK
/0x00002914-0x00002a0b (0x0000f8)/ (Configuration) - OK
/0x00002a0c-0x00002a4f (0x000044)/ (GUID) - OK
/0x00002a50-0x00002b9b (0x00014c)/ (Image Info) - OK
/0x00002b9c-0x00003b2f (0x000f94)/ (DDR) - OK
/0x00003b30-0x00167043 (0x163514)/ (DDR) - OK
/0x00167044-0x00167a7f (0x000a3c)/ (DDR) - OK
/0x00167a80-0x0017319f (0x00b720)/ (Configuration) - OK
/0x001731a0-0x001731cb (0x00002c)/ (Jump addresses) - OK
/0x001731cc-0x00175673 (0x0024a8)/ (FW Configuration) - OK
/0x00000000-0x00175673 (0x175674)/ (Full Image) - OK

-I- FW image verification succeeded. Image is bootable.

Image type:          FS2
FW Version:          9.3.1260
FW Release Date:     7.12.2014
Device ID:           51000
Description:         Node      Port1      Port2      Sys image
GUIDs:              0000000000000000 0000000000000000 0000000000000000 0000000000000000
MACs:               000000000000      000000000000      000000000000
VSD:                n/a
PSID:               MT_1270110020
```

This will leave a new .bin file in the web\_share folder

Rename it to MSX6012\_9.3.1260.bin for later consumption, or something consistent to use in other commands in document

## EMC switch preparation

Plug into switch console port and use putty or similar to connect to the terminal

Boot up switch and in U-BOOT press any key when asked to stop the booting process

At this stage take a backup of the environment variables, copy the output to a text file on the Win10 machine

```
printenv
```

Use below commands to set up U-BOOT to be able to load the manufacturing environment

```
setenv mfg_ramdisk_size 180224
```

```
setenv mfg_extra_args ramdisk=262144
```

```
setenv ipaddr 192.168.7.49
```

```
setenv netmask 255.255.255.0
```

```
setenv gatewayip 192.168.7.253
```

```
setenv serverip 192.168.7.77
```

```
setenv autostart no
```

```
setenv autoload no
```

```
run boot_mlxlinux (this also runs a saveenv, so no need to run it after executing this)
```

## Load manufacturing environment

Provided the previous section is completed can then load up the manufacturing environment

```
run mfg_nodhcp
```

Once loaded this will ask to log in, simply entering root in the login field will let you log in to the Linux environment

```
RAMDISK: Compressed image found at block 0
EXT2-fs warning: checktime reached, running e2fsck is recommended
VFS: Mounted root (ext2 filesystem).
Freeing unused kernel memory: 160k init
hwclock: Could not access RTC: No such file or directory
Running startup scripts.
Running /etc/init.d/rcS.d/S05hwrng
Probing for HRNG module
Mixing in entropy from HRNG
Running /etc/init.d/rcS.d/S10tms_dhcp
Starting DHCP client on interfaces: eth0 eth1

dhcp eth0: starting
dhcp eth1: starting
dhcp eth0: obtained lease
dhcp eth0: adding address: 192.168.7.73 / 24
dhcp eth0: adding domain: test.local
dhcp eth0: adding dns: 192.168.7.140
dhcp eth1: failed to get lease
Running /etc/init.d/rcS.d/S30tms_autostart
Running /etc/init.d/rcS.d/S34automfg
-
(none) login: root

BusyBox v1.00 (2010.12.03-23:16+0000) Built-in shell (ash)
Enter 'help' for a list of built-in commands.

Processing /etc/profile... Done
```

## Genlicense

While in the manufacturing environment, I am going to deal with the ethernet and shell access licences

This information is gathered from information in the EMC thread on how to get the license keys using nothing but the information available through the genlicense binary alone. Thanks to crash\_maxed and lambdafunction

Thanks to andvalb from STH for supplying the command on how to generate one license key with multiple licences activated

These licenses appear to be generic and not tied to anything by the look of things, so are here for my own convenience

It does look like it is possible to generate license keys for the switch specifically but I have not had time to experiment yet

However, Appendix 3 – genlicense section on how to generate the licences

Generic licence keys

LK2-EFM\_SX-5M11-5K11-5T11-88A1-BBD0-JP82-X - Enabled ethernet, L2 ethernet, L3 ethernet

LK2-RESTRICTED\_CMD5\_GEN2-88A1-NEWD-BPNB-1 - Enables \_shell command

## Remanufacture switch!

This operation will configure the bootloader/U-BOOT to work with the 2 partitions, so can run 2 images at once. It will also flash the original Mellanox U-BOOT and reload completely fresh U-BOOT variables,



all of the EMC variables will be gone at this point on the next reboot and the MLNX-OS menu will be functional as it is part of the non EMC branded U-BOOT

/sbin/manufacture.sh -a -m ppc -B -u [http://192.168.7.77/image-PPC\\_M460EX-SX\\_3.4.0012.img](http://192.168.7.77/image-PPC_M460EX-SX_3.4.0012.img)

COM3 - PuTTY

```
# /sbin/manufacture.sh -a -m ppc -B -u http://192.168.7.77/image-PPC_M460EX-SX_3.4.0012.img
===== Starting manufacture at 20220105-032828
===== Called as: /sbin/manufacture.sh -a -m ppc -B -u http://192.168.7.77/image-PPC_M460EX-SX_3.4.0012.img

=====
Manufacture script starting
=====

== Using model: ppc
== Using kernel type: uni
== Using layout: MFL1
== Using partition name-size list:
== Using device list: /dev/mtd
== Using interface list: mgmt0 mgmt1
== Using interface naming: ifindex-sorted
== Smartd disabled
== Cluster enable: no
== Cluster ID: (none)
== Cluster description: (none)
== Cluster interface: (none)
== Cluster master virtual IP address: 0.0.0.0
== Cluster master virtual IP masklen: 0
== Cluster shared secret: (none)
== Cluster expected number of nodes: 0
- Assigning specified interface names in ifindex-sorted order
-- Mapping MAC: F4:52:14:CA:CC:3A from: eth0 to: mgmt0
-- Mapping MAC: F4:52:14:CA:CC:3B from: eth1 to: mgmt1
== Using image from URL: http://192.168.7.77/image-PPC_M460EX-SX_3.4.0012.img

== Calling writeimage to image system
== System successfully imaged
-- Writing Host ID: 7219579975c5
-- Writing mapping for F4:52:14:CA:CC:3A from eth0 to mgmt0
-- Writing mapping for F4:52:14:CA:CC:3B from eth1 to mgmt1
== Calling imgverify to verify manufactured system
===== Ending manufacture at 20220105-035824
-- Manufacture done.
# reboot
```

This step will take quite a while, it will be around 30 – 60 minutes and there is no progress indicators on the really slow parts when it gets to “Calling writeimage to image system” and “Calling imgverify to verify manufactured system” parts

When the message “Manufacture done” displays, enter reboot and let it boot into MLNX-OS without any interaction

## U-BOOT observation

EMC U-BOOT prior to the manufacturing operation U-BOOT on switch startup shows

- U-Boot 2009.01 SX\_PPC\_M460EX SX\_3.2.0330-82-EMC ppc (Feb 27 2013 - 12:13:42)

Post manufacture with Mellanox U-BOOT

- U-Boot 2009.01 SX\_PPC\_M460EX SX\_3.2.0330-82 ppc (Dec 20 2012 - 17:53:54)

A copy of the freshly built switch’s U-BOOT variables is in Appendix 5 – Mellanox U-BOOT environment variables

Screenshot of boot post manufacture, showing new U-BOOT as well as the MLNX-OS boot menu

**NOTE:** This reboot only will contain messages that CRC has changed due to U-BOOT being flashed to Mellanox version

```
U-Boot 2009.01 SX_PPC_M460EX SX_3.2.0330-82 ppc (Dec 20 2012 - 17:53:54)

CPU:   AMCC PowerPC 460EX Rev. B at 1000 MHz (PLB=166, OPB=83, EBC=83 MHz)
       Security/Kasumi support
       Bootstrap Option H - Boot ROM Location I2C (Addr 0x52)
       Internal PCI arbiter disabled
       32 kB I-Cache 32 kB D-Cache
Board: Mellanox PPC460EX Board
FDEF:  No
I2C:   ready
DRAM:  2 GB (ECC enabled, 333 MHz, CL3)
FLASH: 16 MB
NAND:  1024 MiB
*** Info - CRC has changed, resetting to default environment
*** Saving default environment to flash
. done
Un-Protected 1 sectors
Erasing Flash...
. done
Erased 1 sectors
Writing to Flash... done
. done
Protected 1 sectors
PCI:   Bus Dev VenId DevId Class Int
PCIE0: link is not up.
PCIE1: successfully set as root-complex
       01 00 15b3 c738 0c06 00
Net:   ppc_4xx_eth0, ppc_4xx_eth1
Reading image settings from EEPROM

Mellanox MLNX-OS

Default image: 'SX_PPC_M460EX_SX_3.4.0012_2014-12-15_23:27:42_ppc'
Press Enter to boot this image, or 'Ctrl B' for boot menu

Booting default image in:  0

Mellanox MLNX-OS Boot Menu:

*  1: SX_PPC_M460EX_SX_3.4.0012_2014-12-15_23:27:42_ppc
   2: SX_PPC_M460EX_SX_3.4.0012_2014-12-15_23:27:42_ppc
   u: USB menu (if USB device connected)
   c: Command prompt

Choice: █
```

## Post manufacturing reboot

After the reboot we are greeted with the MLNX-OS prompt

Login details are admin / admin

After a little while it will prompt for the wizard to do initial setup

After the wizard the configuration of the modules will take quite a while again.

```

Mellanox MLNX-OS Switch Management

switch-cacc3a login: admin
Password:

Mellanox Switch

Mellanox configuration wizard

Do you want to use the wizard for initial configuration?
Please answer 'yes' or 'no'.
Do you want to use the wizard for initial configuration? yes

Step 1: Hostname? [switch-cacc3a] sx6012
Step 2: Use DHCP on mgmt0 interface? yes
Step 3: Enable IPv6? [yes] no
Step 4: Admin password (Enter to leave unchanged)?

You have entered the following information:

1. Hostname: sx6012
2. Use DHCP on mgmt0 interface: yes
3. Enable IPv6: no
4. Admin password (Enter to leave unchanged): (unchanged)

To change an answer, enter the step number to return to.
Otherwise hit <enter> to save changes and exit.

Choice:

Configuration changes saved.

To return to the wizard from the CLI, enter the "configuration jump-start"
command from configure mode. Launching CLI...

System is initializing!
This may take a few minutes

Modules are being configured
sx6012 [standalone: *unknown*] > enab
sx6012 [standalone: *unknown*] # conf t
sx6012 [standalone: *unknown*] (config) #

```

## Loading the licences

Enter below commands after completion

enable

configure terminal

license install LK2-EFM\_SX-5M11-5K11-5T11-88A1-BBD0-JP82-X

license install LK2-RESTRICTED\_CMDS\_GEN2-88A1-NEWD-BPNB-1

configuration write

```

switch-cacc3a [standalone: master] > enable
switch-cacc3a [standalone: master] # conf t
switch-cacc3a [standalone: master] (config) # license install LK2-EFM_SX-5M11-5K11-5T11-88A1-BBD0-JP82-X
License was installed successfully. Please wait 1 minute before further configurations.
switch-cacc3a [standalone: master] (config) # license install LK2-RESTRICTED_CMDS_GEN2-88A1-NEWD-BPNB-1
switch-cacc3a [standalone: master] (config) # configuration write
switch-cacc3a [standalone: master] (config) # show licenses
License 1: LK2-EFM_SX-5M11-5K11-5T11-88A1-BBD0-JP82-X
  Feature:      EFM_SX
  Description:   Generic SX license
  Valid:        yes
  Active:       yes
  Eth enabled:  true
  Full Eth L2 enabled: true
  Eth L3 enabled: true

License 2: LK2-RESTRICTED_CMDS_GEN2-88A1-NEWD-BPNB-1
  Feature:      RESTRICTED_CMDS_GEN2
  Description:   Access to restricted system functionality
  Valid:        yes
  Active:       yes
switch-cacc3a [standalone: master] (config) #

```

## Change FRU from EMC to Mellanox

First we need the script by SGS from Appendix 2 - FRU conversion scripts, go to the correct section for switch type

Original link to where these originated from:

<https://forums.servethehome.com/index.php?threads/beware-of-emc-switches-sold-as-mellanox-sx6xxx-on-ebay.10786/post-287882>

This will convert the FRU from EMC to SX6012, SX6018 and SX6036.

Testing has been successful on SX6012 and SX6018, but I do not have a SX6036 for testing on

## Create the FRU modification script

This is created by a SGS on STH for SX6012 switches and I modified them for SX6018 and pending SX6036

From terminal, remembering to change to the switch type we are dealing with, here I used emc\_to\_6012:

\_shell

touch emc\_to\_6012

vi emc\_to\_6012

```

sx6012 [standalone: *unknown*] > enable
sx6012 [standalone: *unknown*] # conf t
sx6012 [standalone: *unknown*] (config) # _shell
[admin@sx6012 ~]# touch emc_to_6012
[admin@sx6012 ~]# vi emc_to_6012

```

push i to insert text

COM3 - PuTTY

```

~
-- INSERT --

```

Copy and paste the required switch model script from Appendix 2 - FRU conversion scripts, ensuring the quotes "" are correct



**NOTE:** This is critical it is copied 100% correctly, without it, and without backup, will be unable to load the switch systems

Once finished making sure all the lines and starts and ends of lines are EXACTLY as per original, press ESC to exit insert mode

[illegible]

Press **SHIFT + :** and type **wq** to save changes and quit vi

```
"emc_to_6012" 14L, 1055C written
[admin@sx6012 ~]#
```

To recheck the saved file, run the vi command again and this time SHIFT + : and type q! if no changes to exit without saving

## Get current FRU

If converting from an earlier converted switch, the bus number may be different for the device bus number, going from 1 to 8, so we you may need to change the 1 to 8 if necessary

```
/opt/tms/bin/mellaggra read fru 1 0x51 1000 fru backplate.bin
```

```
[admin@sx6012 ~]# /opt/tms/bin/mellaggra_read_fru 1 0x51 1000 fru_backplate.bin
Read fru 1 - 0x51, sz - 4096 to file fru_backplate.bin
[admin@sx6012 ~]#
```

## Convert exported FRU to SX60xx

Run command to convert the FRU from EMC to SX60xx

```
sh emc to 6012 "fru backplate.bin" "fru patched.bin"
```

```
[admin@sx6012 ~]# sh emc_to_6012 "fru_backplate.bin" "fru_patched.bin"
[admin@sx6012 ~]# ls -la
total 48
drwxr-xr-x 2 admin root    0 Jan  1 11:25 .
drwxr-xr-x 6 admin root    0 Jan  1 09:00 ..
-rw----- 1 admin root  162 Jan  1 10:07 .bash_history
-rw-r--r-- 1 admin root   18 Dec 15  2014 .bash_logout
-rw-r--r-- 1 admin root  176 Dec 15  2014 .bash_profile
-rw-r--r-- 1 admin root  176 Dec 15  2014 .bashrc
-rw----- 1 admin root  498 Jan  1 11:21 .cli_history
-rw----- 1 admin root    0 Jan  1 09:01 .cli_history.lock
-rw-r--r-- 1 admin root  210 Dec 15  2014 .cshrc
-rw-r--r-- 1 admin root 35201 Dec 15  2014 .gdbinit
-rw-r--r-- 1 admin root  138 Dec 15  2014 .sshrc
-rw-r--r-- 1 admin root 1055 Jan  1 10:41 emc_to_6012
-rw-r--r-- 1 admin root 4096 Jan  1 11:24 fru_backplate.bin
-rw-r--r-- 1 admin root 4096 Jan  1 11:25 fru_patched.bin
[admin@sx6012 ~]#
```

## Backup the original and new FRU to TFTP server


Backup the fru files to server to have, just in case as well as for interest's sake. This will store them in the Win10 machine

```
tftp 192.168.7.77 -c put fru_backplate.bin
```

```
tftp 192.168.7.77 -c put fru_patched.bin
```

```
[admin@sx6012 ~]# tftp 192.168.7.77 -c put fru_backplate.bin
[admin@sx6012 ~]# tftp 192.168.7.77 -c put fru_patched.bin
[admin@sx6012 ~]#
```

This copies the files to the root of the base Tftpd64 folder

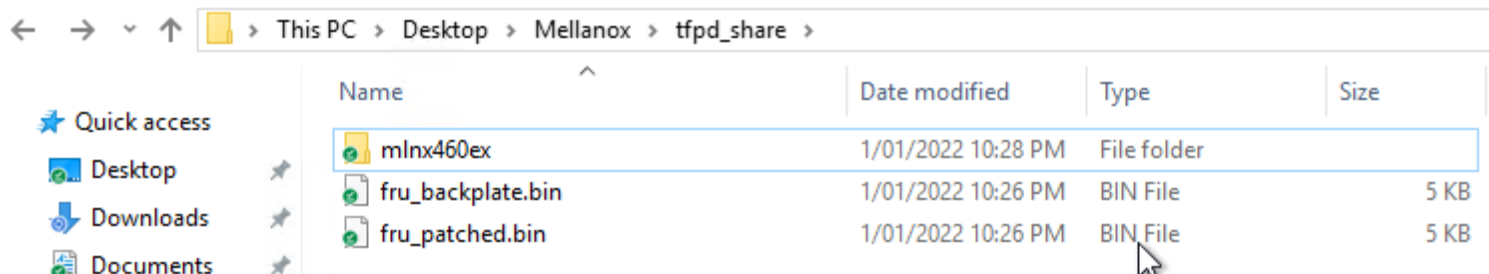

Name	Date modified	Type	Size
mlnx460ex	1/01/2022 10:28 PM	File folder	
fru_backplate.bin	1/01/2022 10:26 PM	BIN File	5 KB
fru_patched.bin	1/01/2022 10:26 PM	BIN File	5 KB

## Send the updated FRU to the switch

Run command to send the converted SX60xx FRU to the switch, changing the device bus number **1** to **8** only if needed.

You should know which bus was used when exploring it from get current FRU step

```
/opt/tms/bin/mellaggra_write_fru 1 0x51 1000 fru_patched.bin
```

```
ed.bin@switch-cacc3a ~]# /opt/tms/bin/mellaggra_write_fru 1 0x51 1000 fru_patch
[admin@switch-cacc3a ~]#
```

## Firmware update

This section details the change of the switch firmware from EMC to Mellanox

### Get the device path

First we need to get the device

mst status

This tells us /dev/mst/mt51000\_pciconf0 is the device we will be dealing with

```
[admin@sx6012 ~]# mst status
MST modules:
-----
MST PCI module loaded
MST PCI configuration module loaded

MST devices:
-----
/dev/mst/dev-i2c-0          - Embedded I2C master
/dev/mst/dev-i2c-1          - Embedded I2C master
/dev/mst/mt51000_pciconf0  - PCI configuration cycles access.
                             domain:bus:dev.fn=0001:81:00.0 addr.reg=88 data.reg=92
                             Chip revision is: 02

[admin@sx6012 ~]#
```

It can also be confirmed with lspci


```
[admin@sx6012 ~]# lspci
0000:40:00.0 PCI bridge: Unknown device aaa0:bed0 (rev 01)
0001:80:00.0 PCI bridge: Unknown device aaal:bed1 (rev 01)
0001:81:00.0 InfiniBand: Mellanox Technologies Unknown device c738 (rev 02)
```

## Get current firmware information

Lets get the current firmware information

flint -override\_cache\_replacement -d /dev/mst/mt51000\_pciconf0 q

Ignore formatting that gets like that when pasted into console

 COM3 - PuTTY

```
f0 qin@switch01 ~]# flint -override_cache_replacement -d /dev/mst/mt51000_pciconf0 q
-W- Firmware flash cache access is enabled. Running in this mode may cause the firmware to hang.
-W- Running quick query - Skipping full image integrity checks.

Image type:      FS2
FW Version:      9.9.1260
Device ID:       51000
Description:      Node          Sys image
GUIDs:           f452140300217560 f452140300217560
Description:      Base          Switch
MACs:            f45214217560    f452142175c0
VSD:             n/a
PSID:            EMC1270110020

[admin@switch01 ~]#
```

## Backup EMC firmware

flint -override\_cache\_replacement -d /dev/mst/mt51000\_pciconf0 ri EMC-old.bin

```
ri EMC-old.bin]# flint -override_cache_replacement -d /dev/mst/mt51000_pciconf0 ri
-W- Firmware flash cache access is enabled. Running in this mode may cause the firmware to hang.
[admin@sx6012 ~]#
```

## Verify old EMC firmware file

flint -i EMC-old.bin q

```
[admin@switch01 ~]# flint -i EMC-old.bin q
-W- Running quick query - Skipping full image integrity checks.

Image type:      FS2
FW Version:      9.9.1260
Device ID:       51000
Description:     Node          Sys image
GUIDs:           f452140300217560 f452140300217560
Description:     Base          Switch
MACs:            f45214217560    f452142175c0
VSD:             n/a
PSID:            EMC1270110020
[admin@switch01 ~]#
```

## Upload old EMC firmware to TFTP server

tftp 192.168.7.77 -m binary -c put EMC-old.bin

```
[admin@sx6012 ~]# tftp 192.168.7.77 -m binary -c put EMC-old.bin
[admin@sx6012 ~]#
```

## Backup firmware ini file

This wont actually be used in the conversion process, but just nice to have as a backup

flint -override\_cache\_replacement -d /dev/mst/mt51000\_pciconf0 dc > EMC1270110020.ini

Ignore formatting that gets like that when pasted into console

```
dc > EMC1270110020.ini -override_cache_replacement -d /dev/mst/mt51000_pciconf0
```

## Upload firmware ini to TFTP server

tftp 192.168.7.77 -c put EMC1270110020.ini

```
[admin@switch01 ~]# tftp 192.168.7.77 -c put EMC1270110020.ini
[admin@switch01 ~]#
```

## Download SX60xx firmware to switch

In the preparation steps I extracted the firmware image to the web\_share folder, it is now time to download it

curl -O http://192.168.7.77/MSX6012\_9.3.1260.bin

```
[admin@switch01 ~]# curl -O http://192.168.7.77/MSX6012_9.3.1260.bin
  % Total    % Received % Xferd  Average Speed   Time    Time     Time  Current
                                 Dload  Upload   Total   Spent    Left   Speed
100 1493k  100 1493k    0     0  1897k      0  --:--:-- --:--:-- --:--:-- 1907k
[admin@switch01 ~]#
```

## Verify new firmware bin file

flint -i MSX6012\_9.3.1260.bin q

```
[admin@sx6012 ~]# flint -i MSX6012_9.3.1260.bin q
-W- Running quick query - Skipping full image integrity checks.

Image type:      FS2
FW Version:      9.3.1260
Device ID:       51000
Description:      Node          Sys image
GUIDs:           0000000000000000 0000000000000000
Description:      Base          Switch
MACs:            000000000000      000000000000
VSD:             n/a
PSID:            MT_1270110020
```

## Flash new firmware to switch

```
flint --override_cache_replacement --allow_psid_change -d /dev/mst/mt51000_pciconf0 -i
./MSX6012_9.3.1260.bin b
```

Ignore formatting that gets like that when pasted into console

```
ev/mst/mt51000_pciconf0 -i ./MSX6012_9.3.1260.bin bent --allow_psid_change -d /d
-W- Firmware flash cache access is enabled. Running in this mode may cause the firmware to hang.

Current FW version on flash: 9.9.1260
New FW version:             9.3.1260

Note: The new FW version is not newer than the current FW version on flash.

Do you want to continue ? (y/n) [n] : y

You are about to replace current PSID on flash - "EMC1270110020" with a different PSID - "MT_1270110020".
Note: It is highly recommended not to change the PSID.

Do you want to continue ? (y/n) [n] : y
Burning FS2 FW image without signatures - %010
```

## Get new/current firmware information

Lets get the newly uploaded firmware information

```
flint -override_cache_replacement -d /dev/mst/mt51000_pciconf0 q
```

Ignore formatting that gets like that when pasted into console

```
f0 qin@switch01 ~]# flint -override_cache_replacement -d /dev/mst/mt51000_pciconf0 q
-W- Firmware flash cache access is enabled. Running in this mode may cause the firmware to hang.
-W- Running quick query - Skipping full image integrity checks.

Image type:      FS2
FW Version:      9.3.1260
Device ID:       51000
Description:      Node          Sys image
GUIDs:           f452140300217560 f452140300217560
Description:      Base          Switch
MACs:            f45214217560      f452142175c0
VSD:             n/a
PSID:            MT_1270110020
[admin@switch01 ~]#
```

## Remove the bootloader password so U-BOOT is accessible

Thanks to necr from STH where I saw this



## Process for image versions under 3.6.5000

**NOTE:** This operation will have to be performed on every new image update if you need to get into the bootloader/U-BOOT, can skip the backup process. I did mine to test on 3.4.0012 and then when I installed 3.6.5000 which allowed to disable it.

Log into \_shell first using

enable

conf t

\_shell

Backup the existing password, or view it using

/opt/tms/bin/mddbreq /config/db/initial query get - /system/bootmgr/password

Ignore formatting that gets like that when pasted into console

```
stem/bootmgr/password~]# /opt/tms/bin/mddbreq /config/db/initial query get - /sy
Name: /system/bootmgr/password
  Attrib: value
  Type: string
  Value: $1$yCoib8pn$vSaWSssw2k17iOJRIdmcw/
```

The text is: \$1\$yCoib8pn\$vSaWSssw2k17iOJRIdmcw/

Remove the bootloader password

/opt/tms/bin/mddbreq /config/db/initial set modify - /system/bootmgr/password string "

eetool -a bf -s UBPASSWD=""

```
ystem/bootmgr/password string ''s/bin/mddbreq /config/db/initial set modify - /s
[admin@switch-cacc3a ~]# eetool -a bf -s UBPASSWD=""
[admin@switch-cacc3a ~]# █
```

Verify the bootloader password is removed

Using mlxi2c, from \_shell

mlxi2c show fru /CPU

```
[admin@switch-cacc3a ~]# mlx2c show fru /CPU
Jan 04 08:12:51 INFO      LOG: Initializing SX log with STDOUT as output file.

----- Block 0 -----
-I- SN      : "MT1349X00764"
-I- PN      : "SA002203"
-I- REV     : "A2"
-I- BID     : 0
-I- CPUT    : "PPC 460EX"
-I- OUI     : 2c9
-I- MAC0    : f45214cacc3a
-I- MAC1    : f45214cacc3b
-I- HWNAME  : "M460EX"

----- Block 1 -----
-I- MFG     : 0
-I- DHCP    : 0
-I- S1STATE : 1
-I- S2STATE : 2
-I- S1OSNAME : "SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc"
-I- S2OSNAME : "SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc"
-I- S1OSARGS : "  img_id=1 quiet loglevel=4 panic=1"
-I- S2OSARGS : "  img_id=2 quiet loglevel=4 panic=1"
-I- UBPASSWD : ""
```

Process for image versions 3.6.5000 and above

**NOTE:** This operation can be performed once and it should keep, I did mine when I updated to 3.6.5000 which disables it

enable

configure terminal

boot bootmgr password 7 ""

write memory

show bootvar

```
switch-cacc42 [standalone: master] (config) # boot bootmgr password 7 ""
switch-cacc42 [standalone: master] (config) # write memory
switch-cacc42 [standalone: master] (config) # show bootvar
Installed images:

  Partition 1:
  PPC_M460EX 3.6.4006 2017-07-03 16:17:35 ppc

  Partition 2:
  PPC_M460EX 3.6.5000 2017-11-10 18:14:29 ppc

Last boot partition: 2
Next boot partition: 2

Serve image files via HTTP/HTTPS: no

No boot manager password is set.

Image signing: trusted signature always required
Admin require signed images: yes

Settings for next boot only:
  Fallback reboot on configuration failure: yes (default)
switch-cacc42 [standalone: master] (config) # show version concise
PPC_M460EX 3.6.5000 2017-11-10 18:14:29 ppc
switch-cacc42 [standalone: master] (config) #
```

## Reboot

This is it, enter reboot to.... reboot, and after that the switch conversion process is completed.

The fans will ramp down quickly in two stages once the switch finishes loading up after the reboot, first to 60% and then 40%.

```
COM3 - PuTTY
U-Boot 2009.01 SX_PPC_M460EX SX_3.2.0330-82 ppc (Dec 20 2012 - 17:53:54)

CPU:  AMCC PowerPC 460EX Rev. B at 1000 MHz (PLB=166, OPB=83, EBC=83 MHz)
      Security/Kasumi support
      Bootstrap Option H - Boot ROM Location I2C (Addr 0x52)
      Internal PCI arbiter disabled
      32 kB I-Cache 32 kB D-Cache
Board: Mellanox PPC460EX Board
FDEF:  No
I2C:   ready
DRAM:  2 GB (ECC enabled, 333 MHz, CL3)
FLASH: 16 MB
NAND:  1024 MiB
PCI:    Bus Dev VenId DevId Class Int
PCIE0:  link is not up.
PCIE1:  successfully set as root-complex
        01 00 15b3 c738 0c06 00
Net:    ppc_4xx_eth0, ppc_4xx_eth1
Reading image settings from EEPROM

Mellanox MLNX-OS

Default image: 'SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc'
Press Enter to boot this image, or 'Ctrl B' for boot menu

Booting default image in:  0

Mellanox MLNX-OS Boot Menu:

*  1: SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc
   2: SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc
   u: USB menu (if USB device connected) (password required)
   c: Command prompt (password required)

Choice: █
```

## Upgrade image versions to 3.6.8012

Run the update process through the switch software packages detailed in Prepare switch software packages heading

Rinse and repeat this, this is pulled from the recommended upgrade paths and based on available packages

show images



```
switch-cacc42 [standalone: master] (config) # show images
Installed images:

Partition 1:
SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc

Partition 2:
SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc

Last boot partition: 1
Next boot partition: 1

No image files are available to be installed.

Serve image files via HTTP/HTTPS: no

No image install currently in progress.

Boot manager password is set.

Image signing: trusted signature always required
Admin require signed images: yes

Settings for next boot only:
  Fallback reboot on configuration failure: yes (default)
```

image delete <tab to autocomplete>

**NOTE:** This is only done once both partitions are updated, don't do this between partition updates as will need to re-download

```
switch-cacc3a [standalone: master] (config) # image delete image-PPC_M460EX-3.4.2008.img
switch-cacc3a [standalone: master] (config) #
```

image fetch [http://192.168.7.77/image-PPC\\_M460EX-3.xxx.img](http://192.168.7.77/image-PPC_M460EX-3.xxx.img)

**Note:** This is only done once per image version and will allow you to perform update on both partitions

```
switch-cacc42 [standalone: master] (config) # image fetch http://192.168.7.77/image-PPC_M460EX-3.4.2008.img
100.0% [#####]
```

show images

```
switch-cacc42 [standalone: master] (config) # show images
Installed images:

Partition 1:
SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc

Partition 2:
SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc

Last boot partition: 1
Next boot partition: 1

Images available to be installed:

image-PPC_M460EX-3.4.2008.img
PPC_M460EX 3.4.2008 2015-06-12 11:48:41 ppc

Serve image files via HTTP/HTTPS: no

No image install currently in progress.

Boot manager password is set.

Image signing: trusted signature always required
Admin require signed images: yes

Settings for next boot only:
Fallback reboot on configuration failure: yes (default)
```

image install <tab to autocomplete>

```
switch-cacc42 [standalone: master] (config) # image install image-PPC_M460EX-3.4.2008.img
Step 1 of 4: Verify Image
100.0% [#####]
Step 2 of 4: Uncompress Image
100.0% [#####]
Step 3 of 4: Create Filesystems
100.0% [#####]
Step 4 of 4: Extract Image
100.0% [#####]
switch-cacc42 [standalone: master] (config) #
```

image boot next

```
switch-cacc42 [standalone: master] (config) # image boot next
switch-cacc42 [standalone: master] (config) #
```

show images

**NOTE:** the password still says it is set but it is nulled now, should be removable completely in a later 3.6.xxxx image

```

switch-cacc42 [standalone: master] (config) # show images
Installed images:

Partition 1:
SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc

Partition 2:
PPC_M460EX 3.4.2008 2015-06-12 11:48:41 ppc

Last boot partition: 1
Next boot partition: 2

Images available to be installed:

image-PPC_M460EX-3.4.2008.img
PPC_M460EX 3.4.2008 2015-06-12 11:48:41 ppc

Serve image files via HTTP/HTTPS: no

No image install currently in progress.

Boot manager password is set.

Image signing: trusted signature always required
Admin require signed images: yes

Settings for next boot only:
  Fallback reboot on configuration failure: yes (default)
switch-cacc42 [standalone: master] (config) #

```

configuration write

```

switch-cacc42 [standalone: master] (config) # configuration write
switch-cacc42 [standalone: master] (config) #

```

3

reload

```

switch-cacc3a [standalone: master] (config) # reload

Rebooting...

System shutdown initiated -- logging off.

```

On the reboot it will boot to partition 2 and you will be able to repeat the above steps again, to update partition 1

After both partitions are updated, you can then move onto the next firmware version

```
U-Boot 2009.01 SX_PPC_M460EX SX_3.2.0330-82 ppc (Dec 20 2012 - 17:53:54)

CPU:   AMCC PowerPC 460EX Rev. B at 1000 MHz (PLB=166, OPB=83, EBC=83 MHz)
       Security/Kasumi support
       Bootstrap Option H - Boot ROM Location I2C (Addr 0x52)
       Internal PCI arbiter disabled
       32 kB I-Cache 32 kB D-Cache
Board: Mellanox PPC460EX Board
FDEF:  No
I2C:   ready
DRAM:  2 GB (ECC enabled, 333 MHz, CL3)
FLASH: 16 MB
NAND:  1024 MiB
PCI:    Bus Dev VenId DevId Class Int
PCIE0:  link is not up.
PCIE1:  successfully set as root-complex
        01 00 15b3 c738 0c06 00
Net:    ppc_4xx_eth0, ppc_4xx_eth1
Reading image settings from EEPROM

Mellanox MLNX-OS

Default image: 'PPC_M460EX 3.4.2008 2015-06-12 11:48:41 ppc'
Press Enter to boot this image, or 'Ctrl B' for boot menu

Booting default image in:  2
```

show images (from updated partition 2)

```
switch-cacc3a [standalone: master] (config) # show images
Installed images:

Partition 1:
SX_PPC_M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc

Partition 2:
PPC_M460EX 3.4.2008 2015-06-12 11:48:41 ppc

Last boot partition: 2
Next boot partition: 2

Images available to be installed:

image-PPC_M460EX-3.4.2008.img
PPC_M460EX 3.4.2008 2015-06-12 11:48:41 ppc

Serve image files via HTTP/HTTPS: no

No image install currently in progress.

Boot manager password is set.

Image signing: trusted signature always required
Admin require signed images: yes

Settings for next boot only:
Fallback reboot on configuration failure: yes (default)
```

show asic-version (from updated partition 2)

This shows that the firmware was automatically updated to what is in MLNX-OS software image 3.4.2008, which is 9.3.3180

```
switch-cacc3a [standalone: master] (config) # show asic-version
=====
Module                Device                Version
=====
MGMT                  SX                  9.3.3180
```

## Appendix

### Appendix 1 – mfa\_extract.py

```
#!/usr/bin/python3
```

```
# tested with
# mstflint -v
# mstflint, mstflint 4.6.0. Git SHA Hash: 375120d
```

```
import sys
import os
import subprocess
import struct
import zlib
import lzma
import re
import configparser
```

```
FLINT = "flint.bat"
```

```
def read_buff(fn, n=-1):
    with open(fn, 'rb') as f:
        return f.read(n)
```

```
def lzma_decompress(buf):
    decomp = lzma.LZMADecompressor(memlimit=0x10000000)
    try:
        return decomp.decompress(buf)
    except lzma.LZMAError:
        pass
    return b''
```

```
def save_bin(fn, buff, bin_off, bin_len):
    decomp = lzma.LZMADecompressor(memlimit=0x10000000)
    with open(fn, 'wb') as f:
        try:
            f.write(decomp.decompress(buff)[bin_off:bin_off + bin_len])
        except lzma.LZMAError:
            pass
    return decomp.eof
```

```
def parse_mtoc(buff, compressed, offset, size):
    mtoc = {}
    if compressed:
        off = 0
        while off < len(buff):
            a, b, c = struct.unpack_from('>32sB1xH', buff, off)
            psid = a.decode('ascii').strip('\0')
            _, pn, _, desc = buff[off+40:off+180].decode('latin1').strip('\0').split('\0')
            mtoc[psid] = { 'pn': pn, 'desc': desc, 'off': [struct.unpack_from('>IHH', buff,
36+off+c+40*i) for i in range(b)]}
            off += 36 + 40 * b + c
        return mtoc
```

```
def mfa_extract(mfname, psid):
    SECTIONS = {}
    BUFFER = bytearray(read_buff(mfname))
    if b'MFAR' != BUFFER[0:4]:
        return 1
```

```

off = 16
for i in range(3):
    a,b,c,d = struct.unpack_from('>B2xBI4s', BUFFER, off)
    off += 8
    SECTIONS[a] = {'offset': off, 'size': c, 'compressed': b and (d == b'\xFD7zX'),
'buff': memoryview(BUFFER[off:off+c]) }
    if SECTIONS[a]['compressed'] and i < 2:
        SECTIONS[a]['buff'] = lzma_decompress(SECTIONS[a]['buff'])
    off += c

MTOC = parse_mtoc(**SECTIONS[1])
if MTOC.get(psid):
    fn = "{}.bin".format(psid)
    for moff in MTOC[psid]['off']:
        off, size = struct.unpack_from('>ii', SECTIONS[2]['buff'], moff[0])
        if size > 0:
            break
    if save_bin(fn, SECTIONS[3]['buff'], off, size):
        print(subprocess.check_output([FLINT, '-i', fn, 'v']).decode('ascii'))
        print(subprocess.check_output([FLINT, '-i', fn, 'q']).decode('ascii'))
        return 0
else:
    for i, psid in enumerate(sorted(MTOC.keys()), 1):
        print('{i:>3}. {psid:15s}{pn:33s}{desc}'.format(i=i, psid=psid, **MTOC[psid]))
    return 0
return 1

if __name__ == "__main__":
    if len(sys.argv) != 3:
        print("Usage:\n\t{0} firmware.mfa <PSID>\t - to extract\n\t{0} firmware.mfa l|list\t - to list".format(*sys.argv))
        sys.exit(2)
    sys.exit(mfa_extract(*sys.argv[1:]))

```

## Appendix 2 – FRU conversion scripts

Check carefully for switch model, ie SX6012, SX6018 or SX6036 (upcoming)

## SX6012

*EMC SX6012 to MSX6012F-2BFS*

```
dd if=/dev/zero bs=16 count=256 of="$2" 2> /dev/null
```

```
dd if="$1" bs=16 count=12 of="$2" conv=notrunc 2> /dev/null
```

```
dd if="$1" bs=16 count=5 of="$2" skip=12 seek=14 conv=notrunc 2> /dev/null
```

```
printf "\x20" | dd of="$2" bs=1 seek=1 count=1 conv=notrunc 2> /dev/null
```

```
printf "\x00" | dd of="$2" bs=1 seek=5 count=1 conv=notrunc 2> /dev/null
```

```
printf "\x05\x0E\x02\x14\x06\x16\x07" | dd of="$2" bs=1 seek=15 count=7 conv=notrunc 2>/dev/null
```

[illegible]

```
printf "\x00\x12\x00\x01\x06\x00\x00\x00\x01\x00\x00\x02\x88\x04\x04\x02\x02\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x0A\x00\x01\x07\x00\x00\x00\x00\x02\x10\x00\x00\x00\x00\x00" | dd of="$2" bs=1 seek=320 count=48 conv=notrunc 2> /dev/null
```

```
printf "\x4D\x53\x58\x36\x30\x31\x32\x46\x2D\x32\x42\x46\x53\x00" | dd of="$2" bs=1 seek=64  
count=14 conv=notrunc 2> /dev/null
```

*MSX6012F-2BFS to MSX1012F-2BFS*


```
if [ "$1" != "$2" ]; then
```

```
dd if="$1" bs=16 count=256 of="$2" 2> /dev/null
```

fi





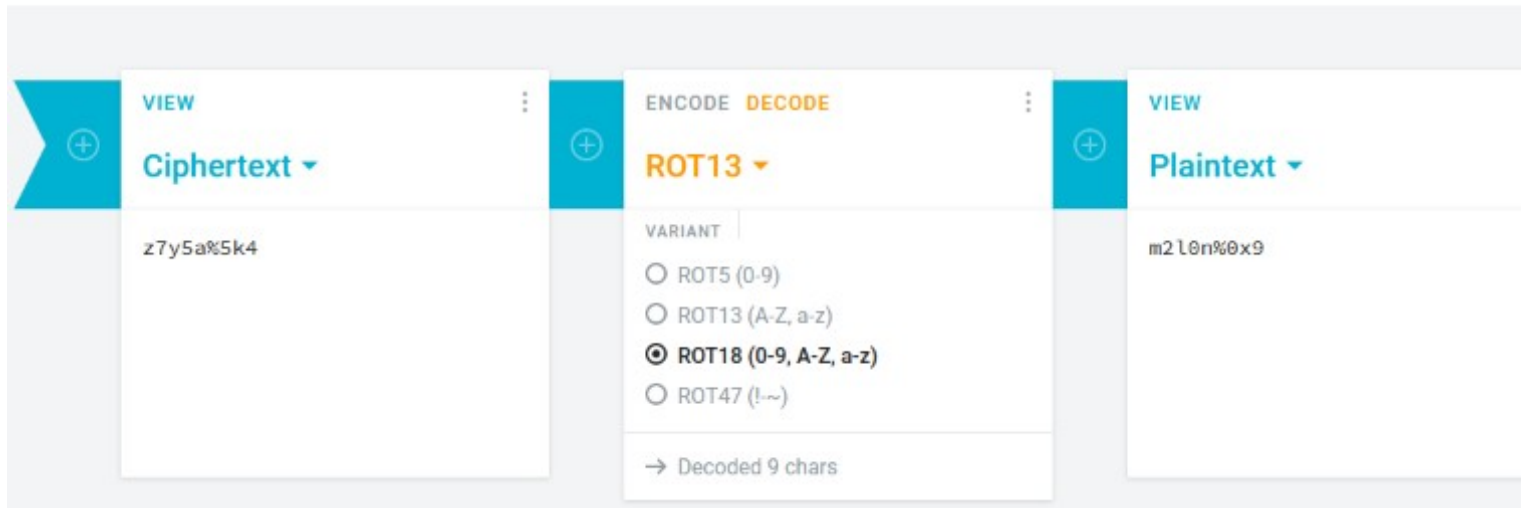

## Generate licences

From the manufacturing environment, genlicense commands can be used to generate ethernet and \_shell licences, additional license keys can be generated as shown.

Thanks to andvalb from STH for supplying the command on how to generate one license key with multiple licences activated

```
Informational option IDs:
 48 (efm_sx_max_num_hca_ports): Maximum number of HCA ports supported by this EFM SX license
 50 (efm_sx_active_ports): Active ports number supported by this EFM SX license
 51 (efm_sx_full_l2_enabled): Full Eth L2 enabled by this EFM SX license
 52 (efm_sx_ib_enabled): IB enabled by this EFM SX license
 53 (efm_sx_eth_enabled): Eth enabled by this EFM SX license
 54 (efm_sx_gw_ports): GW ports number supported by this EFM SX license
 55 (efm_sx_max_uvm_ports): Maximum number of UVM ports supported by this EFM SX license
 56 (efm_sx_ib_speed_sw_limit): IB port SW speed limit enabled by this EFM SX license
 57 (efm_sx_eth_speed_sw_limit): Eth port SW speed limit enabled by this EFM SX license
 58 (efm_sx_l3_enabled): Eth L3 enabled by this EFM SX license
```

Here is the commands I used to generate the licences for my experiment, note the secret that's gained from genlicense binary

```
/opt/tms/bin/genlicense 2 EFM_SX m2l0n%0x9 -o 53 true -o 51 true -o 58 true
```

```
/opt/tms/bin/genlicense 2 RESTRICTED_CMDS_GEN2 m2l0n%0x9
```

```
o 51 true -o 58 true ~]# /opt/tms/bin/genlicense 2 EFM_SX m2l0n%0x9 -o 53 true -
LK2-EFM_SX-5M11-5K11-5T11-88A1-BBD0-JP82-X
9admin@switch-cacc3a ~]# /opt/tms/bin/genlicense 2 RESTRICTED_CMDS_GEN2 m2l0n%0x
LK2-RESTRICTED_CMDS_GEN2-88A1-NEWD-BPNB-1
```

## Appendix 4 - mlx2c interesting dumps

Some interesting information obtainable from mlx2c command

### Get the device bus number

This is needed for backing up and updating the FRU

```
mlx2c show devs -v
```

On line FRU\_EEPROM, Slv Addr 0x51, note the Bus Num, 8 in this case, this is where the emc\_to\_6012 script works

It appears the change in firmware moves it from Bus Num 1 on EMC firmware to Bus Num 8 when converted?



```
[admin@switch-cacc42 ~]# mlx2c show devs -v
Jan 02 13:07:09 INFO      LOG: Initializing SX log with STDOUT as output file.
Name      Bus Num  Handle Slv Addr Addr Width  PRES  Type      Desc
/MANIN_SW      1  0xff00  0x70      0  Yes  PCA9548  "I2C Switch 8 legs"
/SX            2  0xff01  0x48      4  Yes  SX       "SX VPI Switch"
/CPLD_TOR      5  0xff02  0x60      1  Yes  CPLD_TOR "Lattice CPLD TOR, I2C access, addr_width 1"
/QSFP_TEMP1    7  0xff03  0x4a      1  Yes  LM75     "Thermal Monitor"
/QSFP_TEMP2    7  0xff04  0x49      1  Yes  LM75     "Thermal Monitor"
/QSFP_TEMP3    7  0xff05  0x4c      1  Yes  LM75     "Thermal Monitor"
/BOARD_MONITOR 7  0xff06  0x2e      1  Yes  ADM1024  "Thermal Monitor"
/CURR_MONITOR  7  0xff07  0x3f      1  Yes  ADM1191  "Digital Power Monitor"
/FRU_EEPROM    8  0xff08  0x51      2  Yes  24LC32   "Serial EEPROM 4k bytes"
/CPU_BOARD_MONITOR 0  0xff09  0x2e      1  Yes  ADM1024  "Thermal Monitor"
/MGMT/FAN1     0  0xff0a  0x00      1  Yes  SX_FAN_2DRWR_FIX "SX FAN 2x2 Fixed"
/MGMT/FAN2     0  0xff0b  0x00      1  Yes  SX_FAN_2DRWR_FIX "SX FAN 2x2 Fixed"
/MGMT/FAN3     0  0xff0c  0x00      1  Yes  SX_FAN_2DRWR_FIX "SX FAN 2x2 Fixed"
/MGMT/FAN4     0  0xff0d  0x00      1  Yes  SX_FAN_2DRWR_FIX "SX FAN 2x2 Fixed"
/MGMT/PS1      0  0xff0e  0x00      1  Yes  PS_FIX   "Power Supply Fixed"
/MGMT/PS2      0  0xff0f  0x00      1  Yes  PS_FIX   "Power Supply Fixed"
/CPU/FRU_EEPROM 0  0x0000  0x50      2  Yes  24LC32   "Serial EEPROM 4k bytes"
```

Show MGMT FRU details  
mlx2c show FRU MGMT

```
[admin@switch01 ~]# mlx2c show fru MGMT
Jan 03 16:42:02 INFO      LOG: Initializing SX log with STDOUT as output file.

----- Block 0 -----
-I- SN           : "MT1351X02511"
-I- PN           : "MSX6012F-2BFS"
-I- REV          : "01"
-I- MFG_DATE     : 6e4490
-I- PROD_NAME    : "Dingo"
-I- HW_MGT_ID    : 38
-I- HW_MGT_REV   : 20
-I- SW_MGT_ID    : 177c
-I- SYS_DISPLAY  : "SX6012"

----- Block 1 -----
-I- MAX_POWER    : 0
-I- CRIT_AMB_TEMP : 0
-I- CRIT_IC_TEMP  : 0
-I- ALERT_AMB_TEMP : 0
-I- ALERT_IC_TEMP : 0
-I- FAN_DIR       : 0
-I- LENGTH        : 0
-I- WIDTH         : 0
-I- LED           : 0

----- Block 2 -----
-I- GUID_TYPE    : d
-I- UID0         : f452140300217560
-I- UID1         : f452140300217560
-I- UID2         : f45214217560
-I- UID3         : f452142175c0
-I- UID4         : f452142175a0
-I- UID5         : f452142175a8
-I- UID6         : f452142175b0

----- Block 3 -----
-I- FEATURE_EN_0 : 0
-I- FEATURE_EN_1 : 1
-I- FEATURE_EN_2 : 0
-I- FEATURE_EN_3 : 0
-I- FEATURE_EN_4 : 2
-I- FEATURE_EN_5 : 88
-I- FEATURE_EN_6 : 4
-I- FEATURE_EN_7 : 4
-I- FEATURE_EN_8 : 2
-I- FEATURE_EN_9 : 2
-I- FEATURE_EN_10 : 0
-I- FEATURE_EN_11 : 0

----- Block 4 -----
-I- NUM_SCHEME    : 2
-I- EN_PORTS_NUM  : 10
-I- PORTS_INC_SCHEME : 0

[admin@switch01 ~]#
```

Show CPU FRU details  
mlx2c show fru /CPU

```
[admin@switch01 ~]# mlx2c show fru /CPU
Jan 03 16:42:46 INFO      LOG: Initializing SX log with STDOUT as output file.

----- Block 0 -----
-I- SN      : "MT1349X00764"
-I- PN      : "SA002203"
-I- REV     : "A2"
-I- BID     : 0
-I- CPUT    : "PPC 460EX"
-I- OUI     : 2c9
-I- MAC0    : f45214cacc3a
-I- MAC1    : f45214cacc3b
-I- HWNAME  : "M460EX"

----- Block 1 -----
-I- MFG     : 0
-I- DHCP    : 0
-I- S1STATE : 1
-I- S2STATE : 2
-I- S1OSNAME : "SX PPC M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc"
-I- S2OSNAME : "SX PPC M460EX SX_3.4.0012 2014-12-15 23:27:42 ppc"
-I- S1OSARGS : " img_id=1 quiet loglevel=4 panic=1"
-I- S2OSARGS : " img_id=2 quiet loglevel=4 panic=1"
-I- UBPASSWD : "$1$yCoib8pn$vSaWSssw2kl7iOJRIdmcw/"

[admin@switch01 ~]#
```

## Appendix 5 – Mellanox U-BOOT environment variables

This is from a freshly manufactured switch

=> printenv

bootdelay=5

baudrate=9600

loads\_echo=

autoload=n

hostname=mlnx460ex

netdev=eth0

nfsargs=setenv bootargs root=/dev/nfs rw nfsroot=\${serverip}:\${rootpath}

ramargs=setenv bootargs root=/dev/ram rw

addip=setenv bootargs \${bootargs} ip=\${ipaddr}:\${serverip}:\${gatewayip}:\${netmask}:\${hostname}:\${netdev}:off panic=1

addtty=setenv bootargs \${bootargs} console=ttyS0,\${baudrate}

addmisc=setenv bootargs \${bootargs}

initrd\_high=30000000

kernel\_addr\_r=400000

fdt\_addr\_r=800000

ramdisk\_addr\_r=C00000

hostname=mlnx460ex

```
bootfile=mlnx460ex/ulmage
ramdisk_file=mlnx460ex/uRamdisk
rootpath=/opt/eldk/ppc_4xxFP
flash_self=run ramargs addip addtty addmisc;bootm ${kernel_addr} ${ramdisk_addr} ${fdt_addr}
flash_nfs=run nfsargs addip addtty addmisc;bootm ${kernel_addr} - ${fdt_addr}
net_nfs=tftp ${kernel_addr_r} ${bootfile}; tftp ${fdt_addr_r} ${fdt_file}; run nfsargs addip addtty
addmisc;bootm ${kernel_addr_r} - ${fdt_addr_r}
net_self_load=tftp ${kernel_addr_r} ${bootfile};tftp ${fdt_addr_r} ${fdt_file};tftp ${ramdisk_addr_r}
${ramdisk_file};
net_self=run net_self_load;run ramargs addip addtty addmisc;bootm ${kernel_addr_r} $
{ramdisk_addr_r} ${fdt_addr_r}
fdt_file=mlnx460ex/mlnx460ex.dtb
flash_self_old=run ramargs addip addtty addmisc;bootm ${kernel_addr} ${ramdisk_addr}
flash_nfs_old=run nfsargs addip addtty addmisc;bootm ${kernel_addr}
net_nfs_old=tftp ${kernel_addr_r} ${bootfile};run nfsargs addip addtty addmisc;bootm $
{kernel_addr_r}
load=tftp 200000 mlnx460ex/u-boot.bin
update=protect off 0xFFFFA0000 FFFFFFFF;era 0xFFFFA0000 FFFFFFFF;cp.b ${fileaddr} 0xFFFFA0000 $
{filesize};setenv filesize;saveenv
upd=run load update
dhcp_vendor-class-identifier=bootmfg:hwname:mlnx460ex:
clear_filesize=setenv filesize
mfg_dir=mlnx460ex
mfg_args=setenv bootargs root=/dev/ram rw ramdisk_size=${mfg_ramdisk_size} ${mfg_extra_args}
mfg_common_args=run addtty addmisc
mfg_load=tftp ${kernel_addr_r} ${mfg_root}${mfg_dir}/${mfg_kernel_file};tftp ${fdt_addr_r} $
{mfg_root}${mfg_dir}/${mfg_fdt_file};tftp ${ramdisk_addr_r} ${mfg_root}${mfg_dir}/${
mfg_ramdisk_file}
mfg_nodhcp=echo "Manufacture will TFTP from directory ${mfg_root}${mfg_dir}, and boot";echo;
run clear_filesize ; run mfg_load;if test 0${filesize} -gt 0; then echo Booting mfg ; run mfg_args
mfg_common_args;bootm ${kernel_addr_r} ${ramdisk_addr_r} ${fdt_addr_r} ; else ; echo Failed mfg
load ; fi
mfg=echo "Manufacture will DHCP, TFTP from directory ${mfg_root}${mfg_dir}, and boot";echo;
dhcp; run clear_filesize ; run mfg_load;if test 0${filesize} -gt 0; then echo Booting mfg ; run mfg_args
mfg_common_args;bootm ${kernel_addr_r} ${ramdisk_addr_r} ${fdt_addr_r} ; else ; echo Failed mfg
load ; fi
menu_file=menu.img
menu_load=tftp ${menu_addr_r} ${mfg_root}${mfg_dir}/${menu_file}; if test $? -ne 0; then run
clear_filesize ; echo Download failed ;fi
menu_usb_load_ext2=usb start; ext2load usb ${mfg_usb_dev}:${mfg_usb_part} ${menu_addr_r} $
{mfg_usb_root}${mfg_usb_dir}/${menu_file};
menu_usb_load_fat=usb start; fatload usb ${mfg_usb_dev}:${mfg_usb_part} ${menu_addr_r} $
{mfg_usb_root}${mfg_usb_dir}/${menu_file};
```

```
menu_usb_load=if test "x${mfg_usb_fstype}" = "xext2"; then run menu_usb_load_ext2 ; else ; run menu_usb_load_fat ; fi
```

```
menu_usb=run clear_filesize ; run menu_usb_load ; if test 0${filesize} -gt 0; then autoscr ${menu_addr_r}; else ; echo Failed menu load ; fi
```

```
menu_nodhcp=run clear_filesize ; run menu_load ; if test 0${filesize} -gt 0; then autoscr ${menu_addr_r}; else ; echo Failed menu load ; fi
```

```
menu=dhcp ; run clear_filesize ; run menu_load ; if test 0${filesize} -gt 0; then autoscr ${menu_addr_r}; else ; echo Failed menu load ; fi
```

```
fw_file=u-boot.bin
```

```
fw_load=tftp ${fw_addr_r} ${mfg_root}${mfg_dir}/${fw_file}; if test $? -ne 0; then run clear_filesize ; echo Download failed ; fi
```

```
fw_usb_load_ext2=usb start; ext2load usb ${mfg_usb_dev}:${mfg_usb_part} ${fw_addr_r} ${mfg_usb_root}${mfg_usb_dir}/${fw_file};
```

```
fw_usb_load_fat=usb start; fatload usb ${mfg_usb_dev}:${mfg_usb_part} ${fw_addr_r} ${mfg_usb_root}${mfg_usb_dir}/${fw_file};
```

```
fw_usb_load=if test "x${mfg_usb_fstype}" = "xext2"; then run fw_usb_load_ext2 ; else ; run fw_usb_load_fat ; fi
```

```
fw_update_raw=protect off 0xFFFA0000 FFFFFFFF;erase 0xFFFA0000 FFFFFFFF;cp.b ${fw_addr_r} 0xFFFA0000 ${filesize};cmp.b ${fw_addr_r} 0xFFFA0000 ${filesize};setenv filesize; saveenv
```

```
fw_usb_update=run clear_filesize ; run fw_usb_load ; if test 0${filesize} -gt 0; then run fw_update_raw ; else ; echo Failed update load ; fi
```

```
fw_update_nodhcp=run clear_filesize ; run fw_load ; if test 0${filesize} -gt 0; then run fw_update_raw ; else ; echo Failed update load ; fi
```

```
fw_update=dhcp ; run clear_filesize ; run fw_load ; if test 0${filesize} -gt 0; then run fw_update_raw ; else ; echo Failed update load ; fi
```

```
boot_common_args=run addtty admisc
```

```
mfg_usb_dir=mlnx460ex
```

```
mfg_usb_load_ext2=usb start; echo "Loading ${mfg_kernel_file}";ext2load usb ${mfg_usb_dev}:${mfg_usb_part} ${kernel_addr_r} ${mfg_usb_root}${mfg_usb_dir}/${mfg_kernel_file};echo "Loading ${mfg_fdt_file}"; ext2load usb ${mfg_usb_dev}:${mfg_usb_part} ${fdt_addr_r} ${mfg_usb_root}${mfg_usb_dir}/${mfg_fdt_file};echo "Loading ${mfg_ramdisk_file}"; ext2load usb ${mfg_usb_dev}:${mfg_usb_part} ${ramdisk_addr_r} ${mfg_usb_root}${mfg_usb_dir}/${mfg_ramdisk_file}
```

```
mfg_usb_load_fat=usb start; echo "Loading ${mfg_kernel_file}";fatload usb ${mfg_usb_dev}:${mfg_usb_part} ${kernel_addr_r} ${mfg_usb_root}${mfg_usb_dir}/${mfg_kernel_file};echo "Loading ${mfg_fdt_file}"; fatload usb ${mfg_usb_dev}:${mfg_usb_part} ${fdt_addr_r} ${mfg_usb_root}${mfg_usb_dir}/${mfg_fdt_file};echo "Loading ${mfg_ramdisk_file}"; fatload usb ${mfg_usb_dev}:${mfg_usb_part} ${ramdisk_addr_r} ${mfg_usb_root}${mfg_usb_dir}/${mfg_ramdisk_file}
```

```
mfg_usb_load=if test "x${mfg_usb_fstype}" = "xext2"; then run mfg_usb_load_ext2 ; else ; run mfg_usb_load_fat ; fi
```

```
mfg_usb=echo "Manufacture will load from USB directory ${mfg_usb_root}${mfg_usb_dir}, and boot"; echo; run clear_filesize ; run mfg_usb_load; if test 0${filesize} -gt 0; then echo Booting mfg ; run mfg_args mfg_common_args;bootm ${kernel_addr_r} ${ramdisk_addr_r} ${fdt_addr_r} ; else ; echo Failed mfg load ; fi
```

```
fw_addr_r=400000
```

```
menu_addr_r=B00000
```

```
pciconfighost=1
```

pcie\_mode=RP:RP

autoload=no

```
boot_usb_ext2_loc_1=run usb_args_loc_1 boot_common_args;echo "Loading $
{boot_kernel_file}";ext2load usb ${boot_usb_dev}:${boot_usb_part_loc_1} ${kernel_addr_r} $
{boot_usb_root}${boot_usb_dir}/${boot_kernel_file};echo "Loading ${boot_fdt_file}";ext2load usb $
{boot_usb_dev}:${boot_usb_part_loc_1} ${fdt_addr_r} ${boot_usb_root}${boot_usb_dir}/$
{boot_fdt_file};bootm ${kernel_addr_r} - ${fdt_addr_r}
```

```
boot_usb_ext2_loc_2=run usb_args_loc_2 boot_common_args;echo "Loading $
{boot_kernel_file}";ext2load usb ${boot_usb_dev}:${boot_usb_part_loc_2} ${kernel_addr_r} $
{boot_usb_root}${boot_usb_dir}/${boot_kernel_file};echo "Loading ${boot_fdt_file}";ext2load usb $
{boot_usb_dev}:${boot_usb_part_loc_2} ${fdt_addr_r} ${boot_usb_root}${boot_usb_dir}/$
{boot_fdt_file};bootm ${kernel_addr_r} - ${fdt_addr_r}
```

```
boot_usb_fat_loc_1=run usb_args_loc_1 boot_common_args;echo "Loading $
{boot_kernel_file}";fatload usb ${boot_usb_dev}:${boot_usb_part_loc_1} ${kernel_addr_r} $
{boot_usb_root}${boot_usb_dir}/${boot_kernel_file};echo "Loading ${boot_fdt_file}";fatload usb $
{boot_usb_dev}:${boot_usb_part_loc_1} ${fdt_addr_r} ${boot_usb_root}${boot_usb_dir}/$
{boot_fdt_file};bootm ${kernel_addr_r} - ${fdt_addr_r}
```

```
boot_usb_fat_loc_2=run usb_args_loc_2 boot_common_args;echo "Loading $
{boot_kernel_file}";fatload usb ${boot_usb_dev}:${boot_usb_part_loc_2} ${kernel_addr_r} $
{boot_usb_root}${boot_usb_dir}/${boot_kernel_file};echo "Loading ${boot_fdt_file}";fatload usb $
{boot_usb_dev}:${boot_usb_part_loc_2} ${fdt_addr_r} ${boot_usb_root}${boot_usb_dir}/$
{boot_fdt_file};bootm ${kernel_addr_r} - ${fdt_addr_r}
```

mfg\_kernel\_file=vmlinuz

mfg\_ramdisk\_file=rootfs

mfg\_ramdisk\_size=180224

mfg\_fdt\_file=fdt

mfg\_usb\_dev=0

mfg\_usb\_part=1

mfg\_usb\_fstype=fat

mfg\_usb\_root=/

boot\_kernel\_file=vmlinuz

boot\_fdt\_file=fdt

boot\_usb\_dev=0

boot\_usb\_part\_loc\_1=2

boot\_usb\_part\_loc\_2=3

boot\_usb\_root\_loc\_1=/dev/sda5

boot\_usb\_root\_loc\_2=/dev/sda6

```
usb_args_loc_1=setenv bootargs root=${boot_usb_root_loc_1} ro reset_button=${reset_button}
rootdelay=8 ${image_kernel_args} ${extra_args}
```

```
usb_args_loc_2=setenv bootargs root=${boot_usb_root_loc_2} ro reset_button=${reset_button}
rootdelay=8 ${image_kernel_args} ${extra_args}
```

```
jffs2_args=setenv bootargs root=${rootdev} rootfstype=jffs2 ro reset_button=${reset_button} $
{image_kernel_args} ${extra_args}
```

```
flash_jffs2=run jffs2_args boot_common_args;bootm ${kernel_addr} - ${fdt_addr}
```

ethaddr=F4:52:14:CA:CC:3A  
eth1addr=F4:52:14:CA:CC:3B  
stdin=serial  
stdout=serial  
stderr=serial  
reset\_button=0  
ethact=ppc\_4xx\_eth0  
ver=U-Boot 2009.01 SX\_PPC\_M460EX SX\_3.2.0330-82 ppc (Dec 20 2012 - 17:53:54)  
bm\_mfgmenu\_allowed=0  
bm\_netboot\_allowed=0  
pn=SA002203  
hwname=M460EX  
location=1  
kernel\_addr=0xff000000  
ramdisk\_addr=-  
fdt\_addr=0xff1e0000  
image\_kernel\_args= img\_id=1 quiet loglevel=4 panic=1  
rootdev=/dev/mtdblock6  
bootcmd=run flash\_jffs2

Environment size: 9023/16380 bytes